


TB6560HQV3-T3 3 AXIS DRIVER USER MANUAL

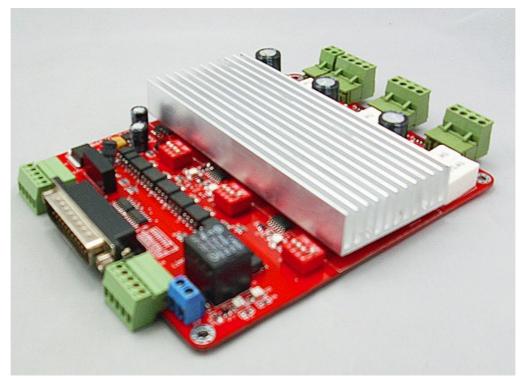



CATALOGUE

TB6560HQV3-T3	1
3 AXIS DRIVER USER MANUAL	1
1. Overview	2
2. TB6560AHQ advantage	
2.1 At low speed operation System Advantages	3
2.2 In high-speed operation System Advantages	3
5. Interface and its definition	6
6. The 4th aixs expansion port connection:	7
7. The limit switch port connection:	8
8. The setting of current, microstepping and current-decay mode adjustable	<u>9</u>
8.1 Current-decay mode setting	<u>9</u>
8.2 microstepping setting	10
8.3 current setting	11
9. The connection of kinds of stepper motors	11
10. Drive board and motor match:	13
(1) A supply voltage selected:	13
(2) output current settings:	13
11. MACH3 software introduction:	15
11.1 Mach3 activate:	15
11.2 Mach3 software setting:	16
<u>11.3 Limit switch mach3 setting:</u>	
<u>11.4</u> , G-Code run:	21

1. Overview

The PC Engraving is a Multifunction Engraving Machine collects engrave and Milling.The machine mainly applicable to Processing of a variety of mold like : Embossing plate,Shoe mold, Button mold, zipper-mode, Text die and stamping die design, equipment molds, glass molds and so on.The machine also applies to the advertising industry like: Division licenses, signs, architectural models, badges, badges, nameplates, panels, logo, numbers, signs, craft decoration, furniture decoration and so on. Besides, applies to portrait, landscape, calligraphy lettering, seals and other graphic art sculpture, YIN, YANG Wen-profile, relief production.

Our shop products 3-axis engraving machine drive, using high-performance dedicated micro-step away from the computer control chip TB6560, Open microcomputer control according to user requirements to functional design to



the driver board, the composition of the minimum control system. he control panel is suitable for any small and medium-driven two-phase or four-phase hybrid stepper motor. And have current 0.6A, 1.2A, 1.8A, 2.5A 4 stalls adjustable function, support MACH2, MACH3 Series software, support KCAM4 Series software, extensive application and mold machining, engraving and other graphic applications. As a result of new bipolar constant-current chopping technique, high precision, the motor is running, little vibration, low noise, smooth operation, safe and convenient, the vast number of DIY enthusiasts and engraving machine manufacturers product of choice.

2. TB6560AHQ advantage

2.1 At low speed operation System Advantages

Low-speed operating system, is the clock frequency is not high, with small current drive-based systems, such as the speed of a few per minute to 100 turn, the user under the conditions in such applications, such as the use of traditional driving scheme, or a result of integrated chips segmentation is too low, leaving low-speed vibration is too large; or had to choose a high drive segments, so that the cost of an unnecessary increase.

TB6560AHQ driver chip's advantages:

(1). Motor vibration, low noise: Because the chip comes with an optional sub-2,4,16, enough to meet nearly every minute to switch from a few of the applications.

(2). embedded drive less heat: chip built-in cooling large enough alone to support small current-driven thermal requirements.

(3).support a variety of stepper motor selection: customers can choose a hybrid or a slightly larger torque permanent magnet stepper motor, the motor work in the allowed maximum torque of between 30-50%, the electrical costs of almost unchanged; chip provides multi-range current set-up and current-decay mode, supporting the same power index a variety of different parameters under the stepper motor.

2.2 In high-speed operation System Advantages

High-speed operating system refers to a higher clock frequency, and a large current drive-based systems, such as the speed of close to 1000 per minute to switch, under the conditions of such application-driven programs such as the use



of traditional or integrated chip segment is too low due to , leaving the system speed range is too small; or because of the excessive breakdown of the high increase in cost, may also occur due to decline in high-frequency torque caused by vibration and noise.

TB6560AHQ driver chip's advantages:

(1). motor vibration, low noise: As the chip comes with 16 sub-TB6560AHQ chip functionality, to meet nearly every minute to switch from a few to the application requirements, and automatically generates a pure sine wave control current, and other high-integrated chip compared to the same high-speed torque is not only not fall under the contrary, increase; TB6560AHQ chip can withstand the peak due to the driving voltage of 40V, 3.5A peak current for the motor torque in the large, high-speed continuous operation under the offer of the technical support.

(2). supports a variety of stepper motor selection: customers can choose a hybrid moment slightly larger or permanent magnet stepper motor, so that the motor operates at maximum torque of between 30-50%, the electrical costs of almost unchanged; chip provides high-current set-up and multi-range current-decay mode, supporting the same power index a variety of different parameters under the stepper motor.

(3). an embedded easy to drive, small size cooling: large current drive, the chip surface to facilitate cooling radiator outside the company can also be directly connected to the user's original controller, metal shell, the embedded drives small size, easy to heat.

In short, due to a high degree of TB6560AHQ chip, the external circuit is extremely simple, highly reliable, support NEMA23 and some NEMA34 stepper motor tens to nearly turn the wide speed range applications, will enable CNC equipment R & D costs and production costs both declined.

3. TB6560T3V1 Driver Board Introduction

The company introduced TB6560T3V1 is the company's accumulated years of design experience drives that the design made of 3-axis engraving machine drive. Main features except the 6560 itself, the other features are as follows:

1. it can drive three axis, The 4th axis expansion, to facilitate your needs 4-

axis machining when working

- 2. Spindle relay output, easy to use software such as mach3 to control spindle start and stop.
- 3. Semi-flow control functions, and effective to stop the motor when the current is reduced to a minimum.
- 4. Interface with a fan, you can add fan under your choice.
- 5. With 3 wire 0.8-3.5A (peak) rated output of two-phase adjustable-



current bipolar stepper motor drive;

- 6. Standard parallel port interface, support for MACH2, KCAM4 series software;
- 7. With optical isolation and DCDC power supply isolation, the full protection of your computer parallel port and equipment;
- 8. with limit switch, can connection 4 aixs limit switch
- 9. Support four microstepping ——1, 1/2, 1/8, 1/16;
- 10. 12—36V single switching power supply,microchips to use as a 5V power supply, stable and heat small
- 11. Using RC +7414 automatic semi-flow, the current automatic reduce when stepper motor stop to down the heat

4. TB6560T3V1 Appearance

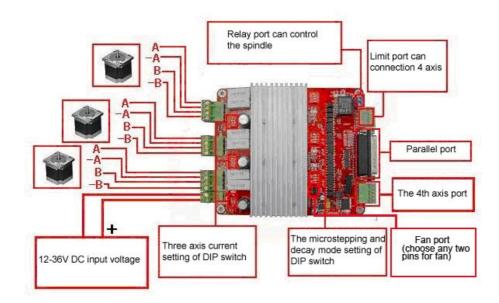


Fig 1



5. Interface and its definition

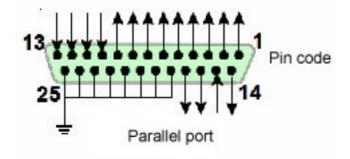



Fig 2

25-pin parallel port control is defined as follows:

DB25 control pin (PIN)	The pin of the drive board	Comment
1	EN	All axes enable
2	STEPX	X(First axis) pulse signal
3	DIRX	X(First axis) direction of the
		signal
4	STEPY	Y(Second axis)pulse signal
5	DIRY	Y(Second axis)direction of
		the signal
6	STEPZ	Z(Third axis) pulse signal
7	DIRZ	Z (The third axis) direction
		of the signal
10	LIMIT-1	Limit input interface 1
11	LIMIT-2	Limit input interface 2
12	LIMIT-3	Limit input interface 3
13	LIMIT-4	Limit input interface 4
14	Relay	
15	Blank	
16	STEPB-	B(4th axis) pulse signal
17	DIRB-	B(4th axis) direction of the
		signal
18-25	GND	



6. The 4th aixs expansion port connection:

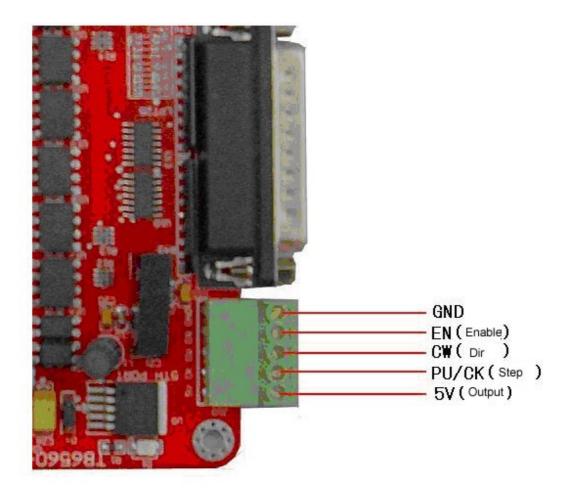





7. The limit switch port connection:


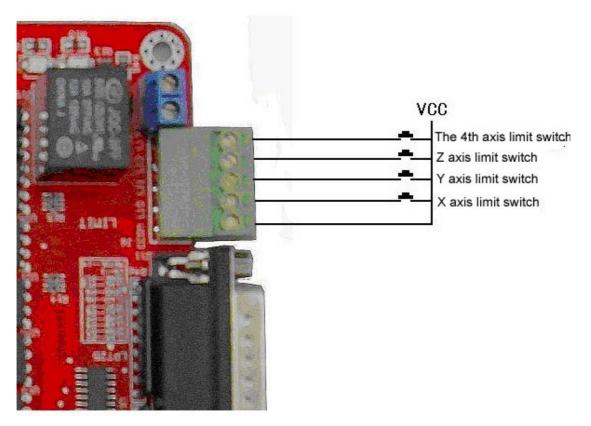


Fig 4



8. The setting of current, microstepping and current-decay mode adjustable

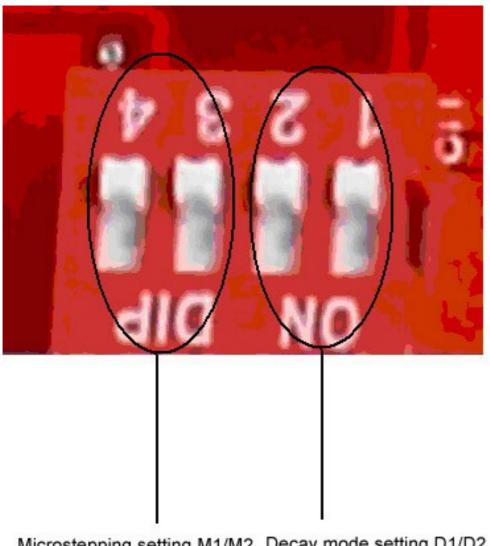

Microstepping setting M1/M2 Decay mode setting D1/D2

8.1、 Current-decay mode setting

Pls use 12-24V,>4A switching power supply

Board marked D1D2 (match with DIP swtich 1 and 2) to set the value of switching current-decay



ON/OF-25%;

OF/ON-50%;	OF/OF	
D1	D2	Working mode
ON	ON	Fast decay
OF	ON	50% fast decay
ON	OF	25%fast decay
OFF	OFF	Slow decay

D1/D2: ON/ON—100%;

Q: The stepper motor driver board the specific role of current-decay What is this?

A: The stepper motor is basically a breakdown of the way current subdivision law, according to the phase current sine wave to be tangent to the current point as subdivision points. In the phase current to reach sub-point control is necessary to control the current decay, otherwise it would be if there will be no way to accurately point overshoot stay in the breakdown of perspective. The motor at different speeds in different choices of decay mode. Fast decay at high speed, low speed when the slow decay. Slow decay at high speed there will be vibrations, high noise problem. Low selection of quick decay can lead to motor weakness and in severe cases closed position. Motor Control IC, the current decay is the target of H-bridge switch the control mode. Slow decay, when the high side pipes closed, fast decay time high or low side tubes are closed. Mixed decay is a first, a rapid decay and then a slow decay, mixing ratio of decay time is also a result of chip and power are not the same as

8.2、microstepping setting

Board marked M1M2(match with DIP swtich 3 and 4) to set the value of switching microstepping resolution

M1	M2	Working mode
OFF	ON	1/16
ON	ON	1/8
ON	OFF	1/2
OFF	OFF	1



Remark:For motor run smoothly, please try to select high segments, such as 1 / 16 microstepping

8.3、 current setting



Current setting T1/T2

Board marked T1T2(match with DIP swtich 1 and 2) to set the value of switching current setting


T1	T2	Current
ON	ON	25%*2.5A
OFF	ON	50%*2.5A
ON	OFF	75%*2.5A
OFF	OFF	100%*2.5A

Proposed current as close as possible stepper motor rated current


9. The connection of kinds of stepper motors

4 lead wires stepper motor:



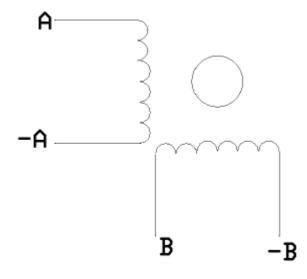


6 lead wires stepper motor:

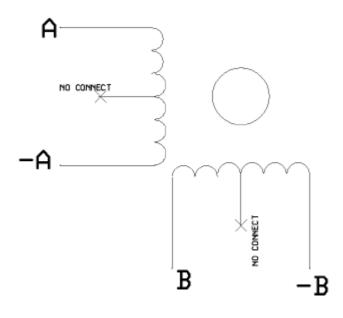

8 lead wires stepper motor:



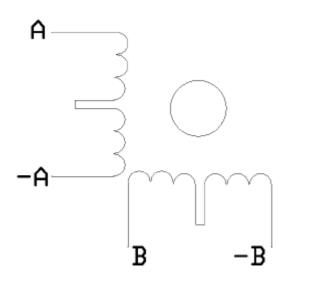

Stepper motor +A -A +B -B connection AP AM BP BM of board port

10. Drive board and motor match:

The driver can drive two or four phase stepper motors, motor drive in order to obtain the most satisfactory results, need to select a reasonable set of supply voltage and current. The supply voltage level of the decision of the highspeed electrical performance, while the current settings determine the motor output torque.

(1) A supply voltage selected:

In general, the more high of the supply voltage, the more torque in high speed, and able to avoid missing step at high speed. On the other hand, the voltage is too high may damage the driver, also big shock in low speed

(2) output current settings:

For the same motor, the greater the current set value, the greater the motor output torque, but the high heat for motor and driver. Therefore, the general situation is that the current is set to supply long-term work machine when warm but not too hot when the values.




1)when 4 or 6 lead wires stepper motors in high-speed mode: the output current is set to equal or slightly less than the motor rated current value;

2) when 6 lead wires stepper motor in high torque mode: the output current is set to 70% of motor rated current

3) 8 -wire motor connected in series: the output current is set to 70% of motor rated current

4) 8 -wire motor parallel connection: the output current can be set to 1.4 times more than the motor rated current.

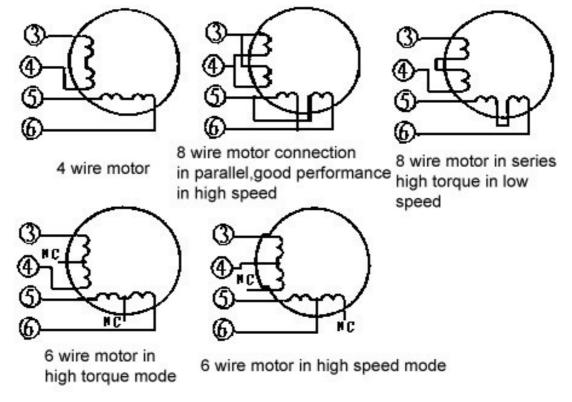

Note: The current setting 15-30 minutes after you run motors, such as the motor temperature is too high, it should reduce the current settings.if after reducing the current value, the motor output torque is not enough, please improve the cooling conditions to ensure that motors and drives are not hot.



11. MACH3 software introduction:

11.1、 Mach3 activate:

Current Profiles	Create Profile
Macharun Plasma	Delete Profile

Fig 5 open MACH3

Shown in Fig5, open the MACH3 software, and then select mach3MILL then OK!



11.2、 Mach3 software setting:

🐉 Mach3 CNC Controller		. <mark>. x.</mark>
Eile Config Function Cfg's View Wizards Operator PlugIn Control Help		
Program Run Alt-1 MDI Alt2 ToolPath Alt4 Offsets Alt5 Settings Alt6	Diagnostics Alt-7 Mill->G15 G80 G17 G40 G20 G90 G94 G54 G49 G99 G64	G97
E F Z	Zero Y +0.0000 Zero Y +0.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale +1.0000 Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Scale Sc	
File: No File Loaded.		Jog ollow
Close G-Code Reverse Run TOC Feed Hold Load G-Code Block Delete H Stop Set Next Line M1 Optional Stop H	A: +0.0000 +0.0000 Auto Tool Zero FRO 6.00 FRO FRO 6.00 FRO 6.00	ed RO % 00
	emember Return reedrate S-ov 0 osed 00:00:00 0 0 0 Jog 01LOFF Ctrl-Alt-J Units/Rev 0.00 0	
History Clear Status:	Profile: Mach3Mill	
	🕎 2.JPG - 画图 🛛 👔 Mach3 CNC Co 🥭 1 🛛 < 😤 🚭 🗊 👽	07:38

Fig 6 mach3 main interface

Open the MACH3 as Fig6, there are some common buttons, then let us set up it!



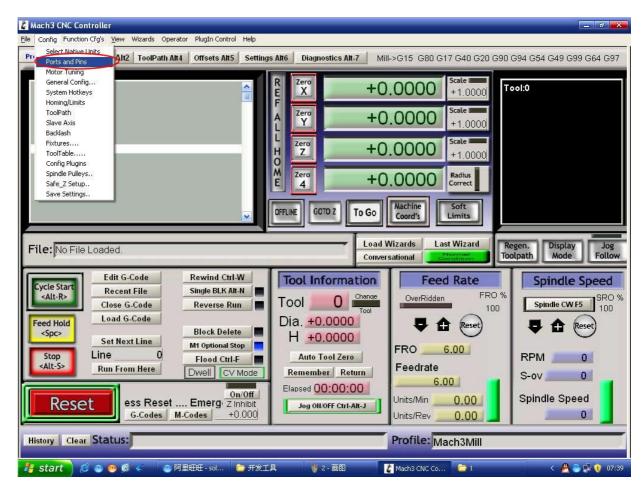


Fig 7 mach3 setting menu

Shown in Fig7, open the CONFIG menu under the PORT & PIN menu.



🛃 Mach3 CNC Controller
Ejle Config Function Cfg's View Wizards Operator Plugin Control Help
Program Run Alt-1 MDI Alt2 ToolPath Alt4 Offsets Alt5 Settings Alt6 Diagnostics Alt-7 Mill->G15 G80 G17 G40 G20 G90 G94 G54 G49 G99 G64 G97
Engine Configuration Ports & Pins
Encoder/MPG's Spindle Setup Mill Options Port Setup and Axis Selection Motor Butputs Input Signals Output Signals
Fort #1 Fort #2 Image: Constraint of the
Stop Line 确定 取消 应用 A 0
Run From Here Dwell CV Mode Remember Return Feedrate S-ov 0 Image: Contract of the state Image: Contrea Image: Contrea
History Clear Status: Profile: Mach3Mill

Fig 8 frequency setting


Circle 1 is for setting the fundamental frequency, this parameter affect the motor

rotation speed. Set up and select Circle 2, configuration pin definitions



A del Commence and		s Alt5 Settin	gs Alt6 Dia(pnostics Alt-7		3	MPG MOI	DE
		8	R Zero E X		+1.53	Mod	e	1
			A Zero	-	+0.55		Veloci Step/	-
ine Con	figuration Ports	s & Pins	I have be			and the second		x
Port	Encoder/MPG's Setup and Acis	 Selection	Spir Motor (adle Setup Dutputs	 Input Sign		l Options Output Signals	
Signal	Enabled	Step Pin#	DIPPINE	Dir LowActive	Step Low Ac	Step Port	Dir Port	
X Axis	4	2	3	×	*	1	1	
Y Axis	14	4	5	*	*	1	1	1
Z Axis	14	6	7	×	*	1	1)
A Axis	X	16	17	×	×	1	1	/
8 Axis	×	~ <u></u>	-0	×	×	0	0	
C Axis	*	0	0	×	×	0	0	
Spindle	×	0	0	×	*	0	0	
					确	定	取消 应用	(<u>A</u>)

Fig 9 The pin setting of Dir,Step

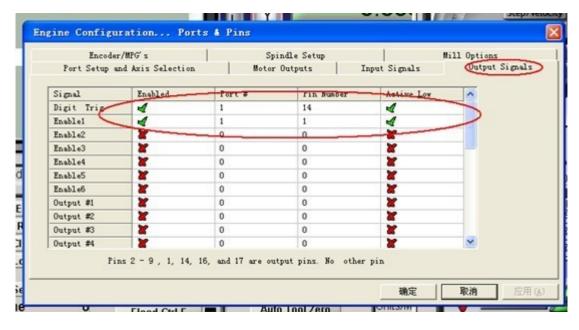



Pls amend the software setting according to this board definition.then select the Output Signas as Fig10,1 is Enable and 14 is relay.



11.3、 Limit switch mach3 setting:

ro	gram Run Alt-1	MDI Alt2	ToolPath Alt4	Offsets Alt5	Settings Alt6	6 MPG MODE
ngi	ine Configurat	ion Ports	& Pins		A R	Mode CAL
-		ler/MPG's	1	Spindle	e Setup	Mill Options
	Port Setup	and Axis Sel	ection	Motor Outp	outs 🤇	Input Signals Output Signals
	Signal	Enghled	Port #	Pin Number	Active Low	Emulated HotKey
	X ++	4	1	10	4	
	x	X	0	0	X	
	X Home	X	0	0	X	
1	Y ++	4	1	11	4	
(Ү	X	0	0	X	😿 o 2 \
	Y Home	X	0	0	X	X 0
N	Z ++	4	1	12	4	X 0
	Z	X	0	0	X	X 0
	Z Home	X	0	0	X	X 0
	A ++	4	1	13	4	
]	Pins 10-13 an	d 15 are input:	s. Only these 5		may be
						确定 取消 应用 (A)
F	eed Hold <spc> Stop <alt-s></alt-s></spc>	Set Next Line Run From	Line O	Block Delet M1 Optional St Flood Ctrl- Dwell CV	op – F –	Slow Jog Rate 90.0 % 4 Button Jog

Click "input signal", setting as Fig11

Fig 11



11.4、G-Code run:

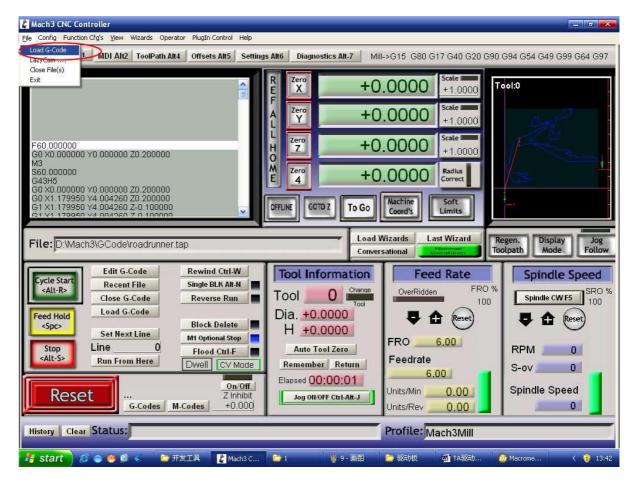


Fig 12 Open G file

When all setting is ok, then open the G-code as Fig 12.



🕻 Mach3 CNC Controller				_ 8 ×
Eile Config Function Cfg's View Wizards (Operator PlugIn Control Help			
Program Run Alt-1 MDI Alt2 ToolPat	th Alt4 Offsets Alt5 Set	tings Alt6 Diagnostics Alt-7 M	ill->G15 G80 G17 G40 G20	G90 G94 G54 G49 G99 G64 G97
			(10000)	
	^	R Zero E X +(0.0000 scale +1.0000	Tool:0
		F		
	打开	7ero		
	查找范围 (I): Code	•	← 🗈 📸 📰 -	
	🔂 🖾 ball.tap			
	我最近的文档 🗟 Cross.tap			
	RestCircle Torodrunne			
	桌面 🖬 Shapes.ta			
File: No File Loaded.	我的文档			Regen. Display Jog
The No File Loaded.				Toolpath Mode Follow
Edit G-Code	我的电脑			Spindle Speed
Cycle Start <alt-r> Recent File</alt-r>				
Close G-Code	网上邻居			D % Spindle CW F5 100
Feed Hold Load G-Code	文件名 (M):	roadrunner	▼ 打开(0)	E 🔂 (Reset)
Set Next Line	文件类型 (I)	and the second sec	▼ 取消	
Stop Line		以只读方式打开 (B)		RPM 0
<alt-s> Run From Here</alt-s>	Dwell CV Mode	Remember Return	Feedrate	S-ov 0
		Elapsed 00:00:00	6.00	5-00 0
Reset S Reset	Emergen Z Inhibit	Jog OII/OFF Ctrl-Alt-J	Units/Min 0.00	Spindle Speed
G-Codes		Jog On OT Cut-Ait-3	Units/Rev0.00	0
Chabury -			Defile	
History Clear Status: ReCon	figuration Estop.		Profile: Mach3Mill	
🯄 start 🛛 😂 💿 🧑 🖉 🌾 🗍	🚞 开发工具 🔰 🛃 Mach3 C.	🧀 1 😽 7 - 🗃 🛚	😂 驱动板 🛛 🖻 TABE动	🙆 Macrome 🔨 🤨 13:42

Fig 13 Open the MACH3 with G-code self test.



Config View Wizards Operator Help		_	
	REZERO +0 F Zero +0 U Zero +0 H Zero +0 Zero +0 GOTO Z To Go	.00(.00(.00(.00(MacPin Coord's	MODE CAL Velocity Only Step/Velocity +8 ¥ Single Step Multi-Step Peedrate 100.00
Le: No File Loaded Second G-Code Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop Stop St	and the second se	Cycle Jog Sh Sational Sational FRO F Units/M	
story Clear Status: ReConfiguration Estop.		Profil	

Fig 14

Open the G code, you can see the red RESET flashing, you can use mouse click the RESET to stop the flashing, then you can press circle 2 position CYCLESTART run.

Also if you need to manual, then you can press TAB key to open the manual control panel



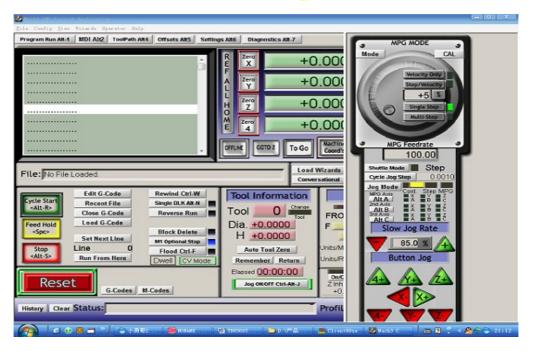


Fig 15